

- Instructions:**
1. Drill hole into ceiling
 2. Connect LED to driver
 3. Connect 230V to driver
 4. Insert driver and spot into ceiling


Forward voltages and nominal drive currents are mentioned on the label supplied with the product or can be found in the technical datasheet of the product.

Always use the correct driver.

Always install the driver according to the wiring schematics supplied with the driver.


Always check if multi-current drivers are set to the correct output current.

Doxis Lighting Factory cannot be held responsible for damage caused by using the wrong driver.

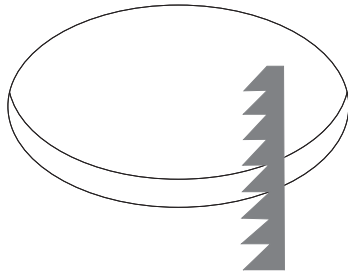

Atlas Fix: Ø95mm
Atlas Mix Round: Ø114mm
Atlas Mix Square: Ø114mm
Atlas Mix 150: Ø 114-145mm


Connect LED*
Red wire: +
Black wire: -

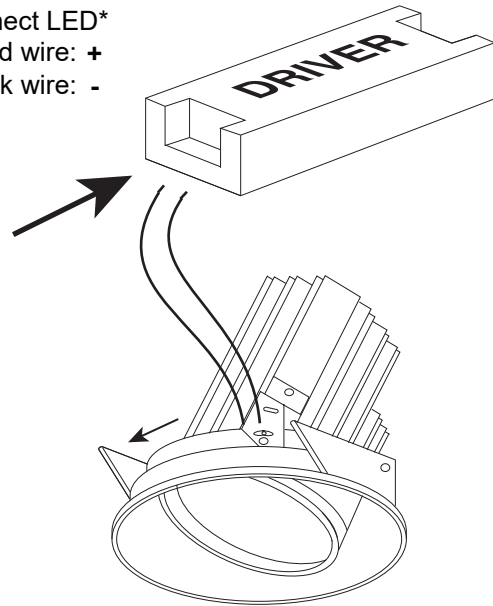


1

2

Connect 230V

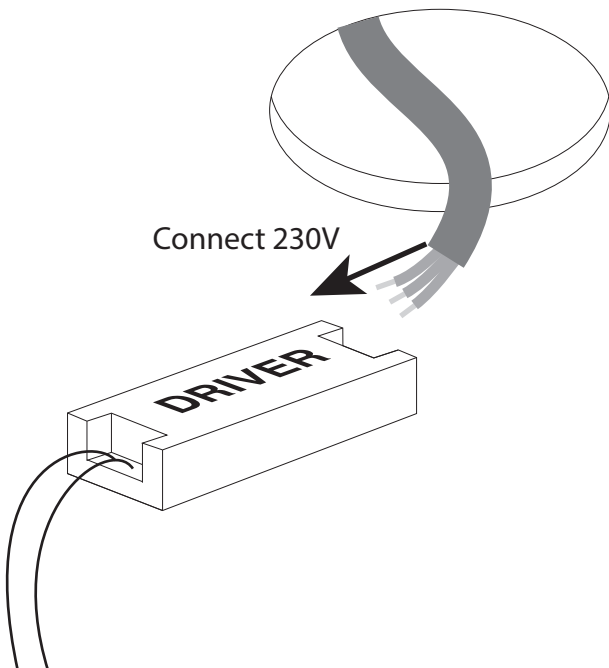

3

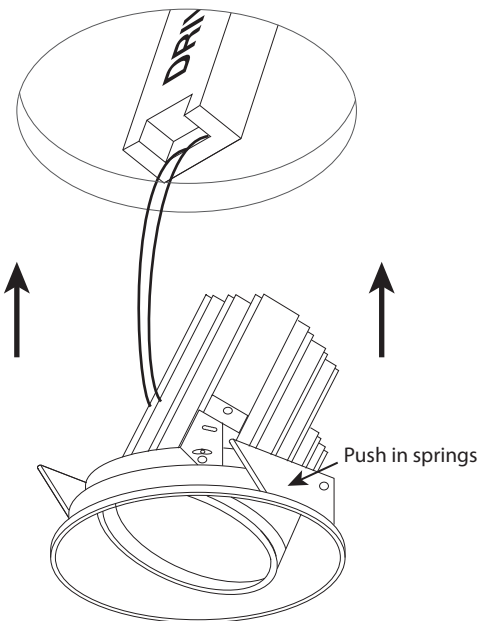

4


⚠ Attention!!

Always follow the instructions described in this document and store this document for future reference.

Do not touch LED surface. Warranty void if LED contact has taken place.
Only to be installed by a qualified electrician.

Always make sure power is completely switched off when working on luminaire.

Doxis Lighting Factory NV cannot be held responsible for any damage caused by incorrect installation, modification, reparation or incorrect application/usage of the product.

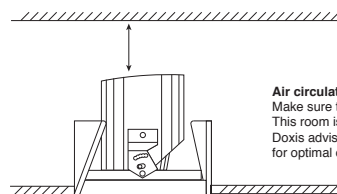

Air circulation

Make sure there is enough room around the spot when built in.
This room is required for air circulation (for LED cooling purposes)
Doxis advises to leave at least 20mm of free space above the spot for optimal cooling.