


Tektus Wall Single - Double - Cross

DOXIS
LIGHTING FACTORY

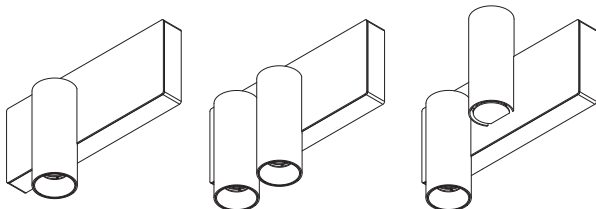


Instructions:

1. Loosen set screws on top and bottom of housing
Remove housing from baseplate
2. Mount base plate to wall using screws
3. Connect wiring to terminal block
4. Place housing aback over base plate
Make sure wiring does not get caught between housing and base plate
Fix housing using set screws on top and bottom of housing


This product contains a light source of energy efficiency class F




Doxis Lighting Factory cannot be held responsible for damage caused by using the wrong driver.

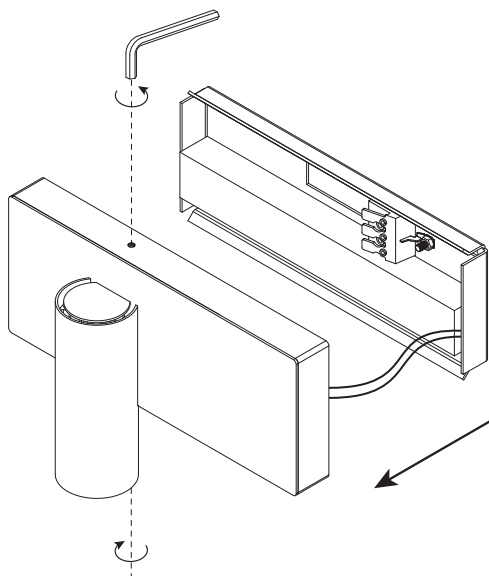


1

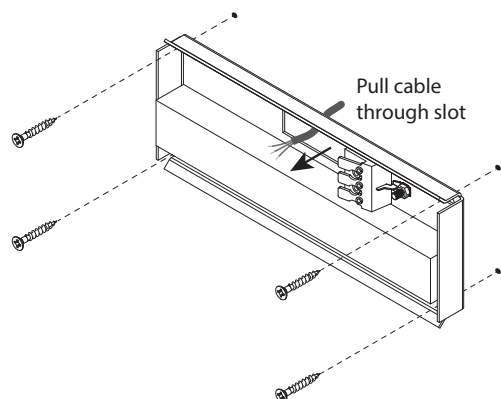

2

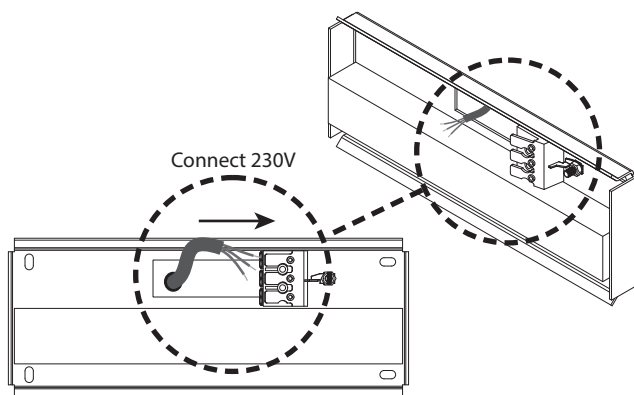


3

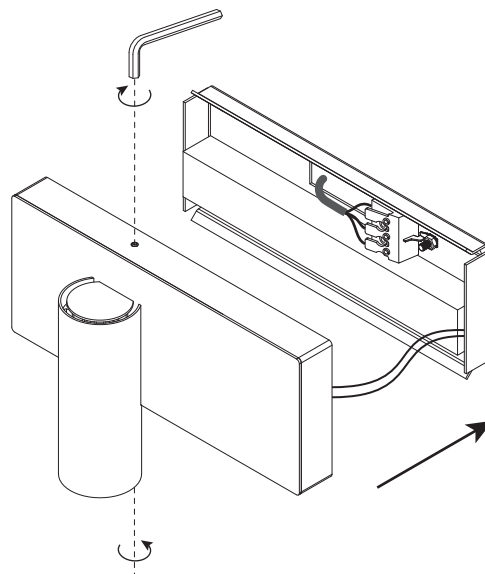


4

Non dim & Mains dim

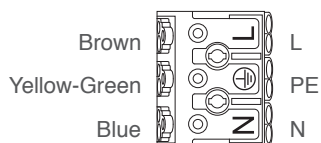

Touch & DALI dim

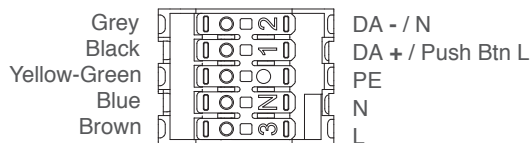

⚠ Attention!!

Always follow the instructions described in this document and store this document for future reference.

Do not touch LED surface. Warranty void if LED contact has taken place.
Only to be installed by a qualified electrician.

Always make sure power is completely switched off when working on luminaire.

Doxis Lighting Factory NV cannot be held responsible for any damage caused by incorrect installation, modification, reparation or incorrect application/usage of the product.