
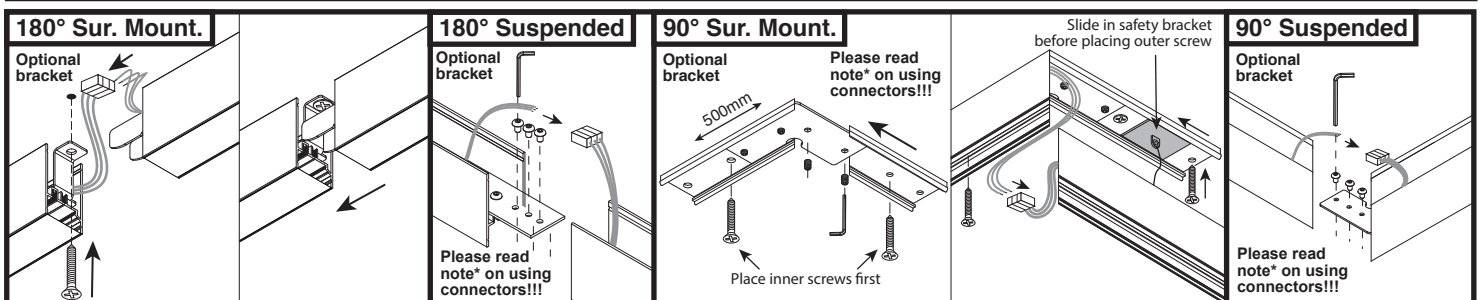
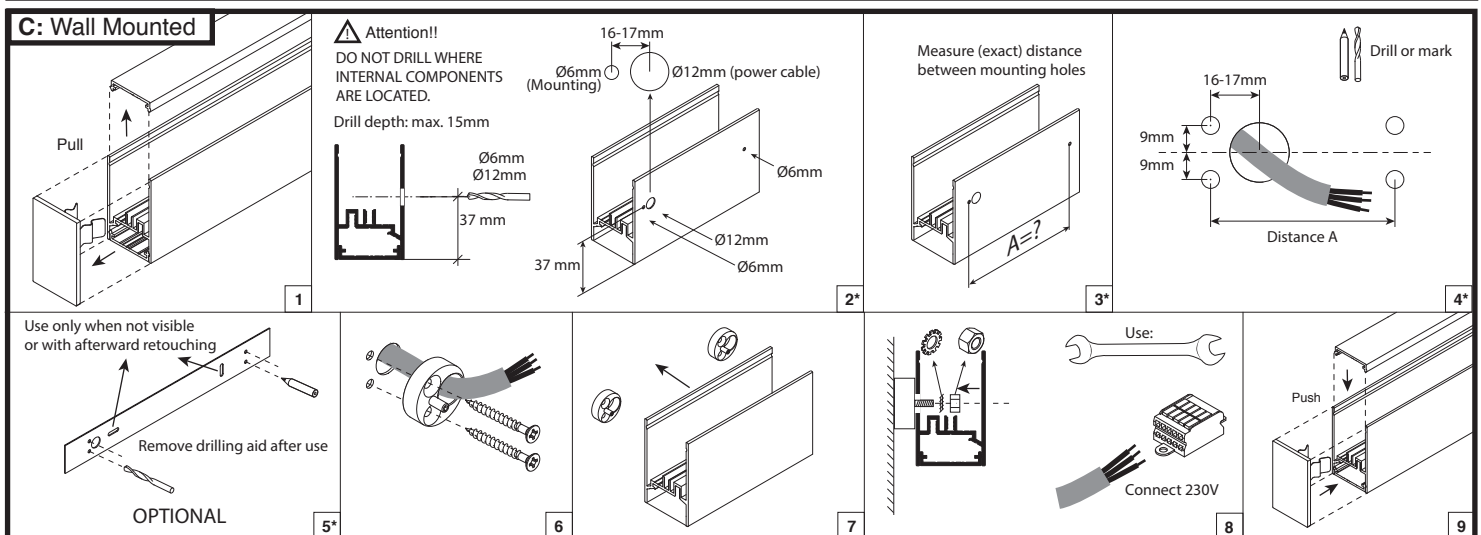
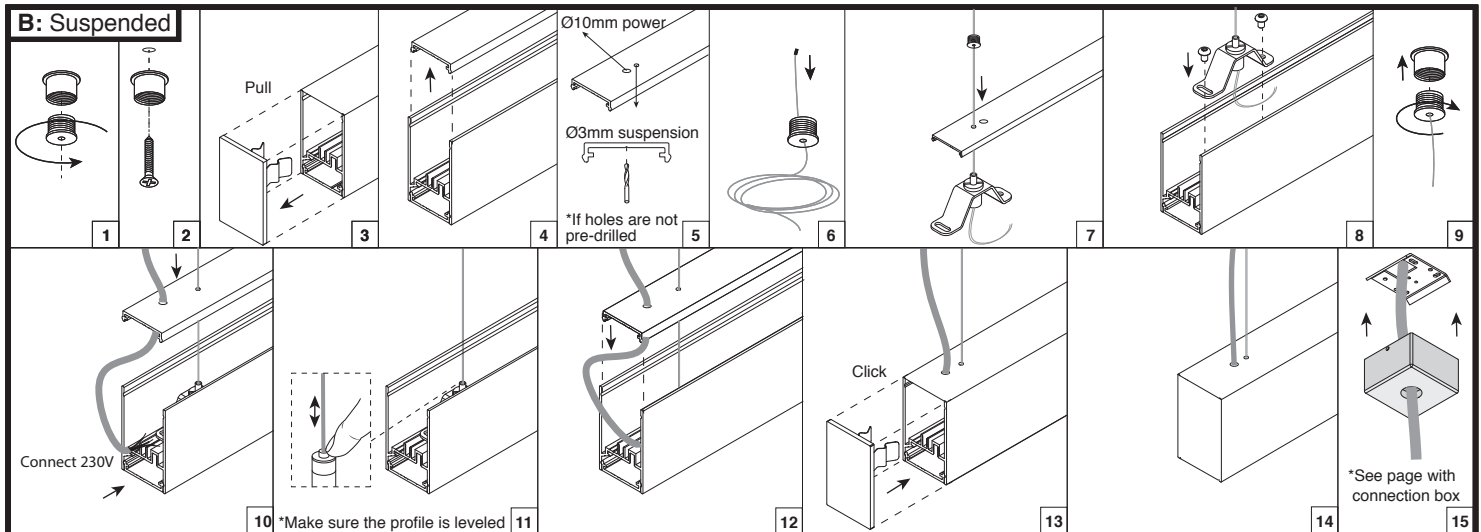


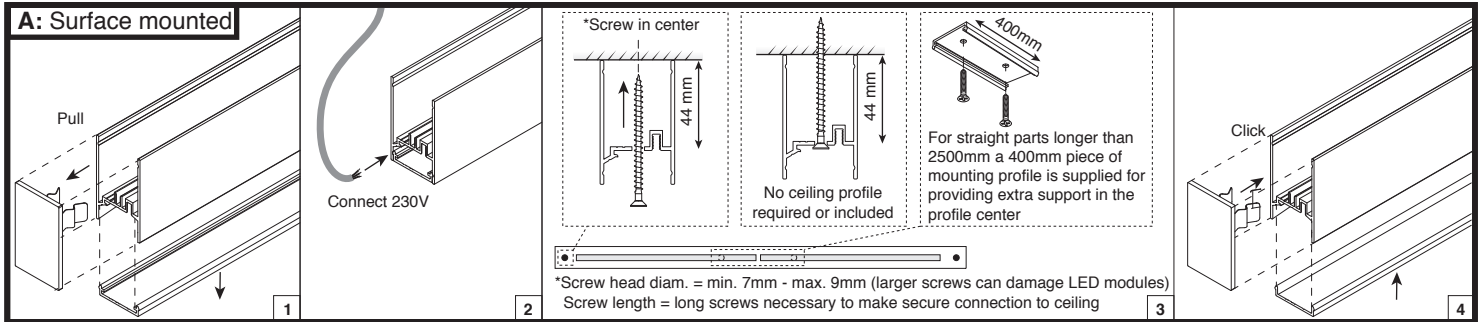

- A) Surface Mounted**
1. Remove PC cover + end cap
 2. Connect 230V
 3. Fix profile to ceiling using screws
Only use pre-drilled holes
Respect screw dimensions
 4. Place PC cover + end cap
- 90°/180° Connector Suspended**
1. Remove top cover
 2. Connect power
Place pieces against each other
Fix connector bracket using screws
 3. Place top cover back
- 90° Connector Surface mounted**
1. Assemble connector
 2. Fix bracket to ceiling using 2x inner screw hole
 3. Slide safety brackets into connector
 4. Fix bracket with outer screws
 5. Connect power and mount profiles

- 180° Connector Surface mounted**
1. Fix profile A with screw-hole bracket against ceiling using a screw
 2. Connect power to profile B
 3. Carefully slide profile B in profile A.
- B) Suspended**
1. Disassemble ceiling fixation
 2. Fix ceiling fixation to ceiling using screws
 3. Remove end cap on one side of the profile
 4. Remove top cover for connecting power
 5. Drill holes at preferred distance (if not pre-drilled)
 6. Pull steel wire trough bottom part of ceiling fixation
 7. Pull cable trough top cover and into wiregripper
 8. Screw wiregripper on profile
 9. Reassemble ceiling fixation
 10. Connect 230V
 11. Adjust height and cut off excess wire
 12. Place top cover back
 13. Place end cap back
 14. Result
 15. Place housing over bracket and reassemble
See page with mounting brackets

- C) Wall Mounted**
1. Remove end cap and top cover
- *When drilling aid is not supplied:**
2. Drill holes into profile if they are not pre-drilled
 3. Measure holes (distance A and B)
 4. Drill holes in wall + place plugs or mark screw locations
Only use countersunk screws, max. screw diameter 5mm
- *When drilling aid is supplied:**
5. Drill holes in wall + place plugs or mark screw locations using aid
Only use countersunk screws, max. screw diameter 5mm
Caliper can be fixed into the wall using the 2 positioning slots
When using positioning slots make sure holes are not visible afterward or can be retouched before placing profile on brackets
- Further steps:**
6. Fix wall mounting bracket to wall using screws
Only use countersunk screws, max. screw diameter 5mm
 7. Place profile on brackets by placing holes over threaded shaft
 8. Fix profile to bracket with toothed lock washer and nut (use wrench)
 9. Place cover and end cap back.

- ! Attention!!**
- Be very careful with LEDs when working on product! Do not touch LEDs
Do not let tools come in contact with LEDs
Warranty void if LED contact has taken place
- Only to be installed by a qualified electrician
Always make sure power is completely switched off when working on profile
- Always make sure suspension cables are placed perpendicular to both the ceiling and the profile itself
- When connecting multiple parts of a structure always make sure LED polarity is respected. This means connecting white to white and grey to grey wires
- *NOTE ON USING CONNECTORS 90°/180°**
For prevention of light leakage caused by the small gap on the connection of two profiles please place tape over gaps.
See page "Light leakage prevention"