




A: Surface mounted

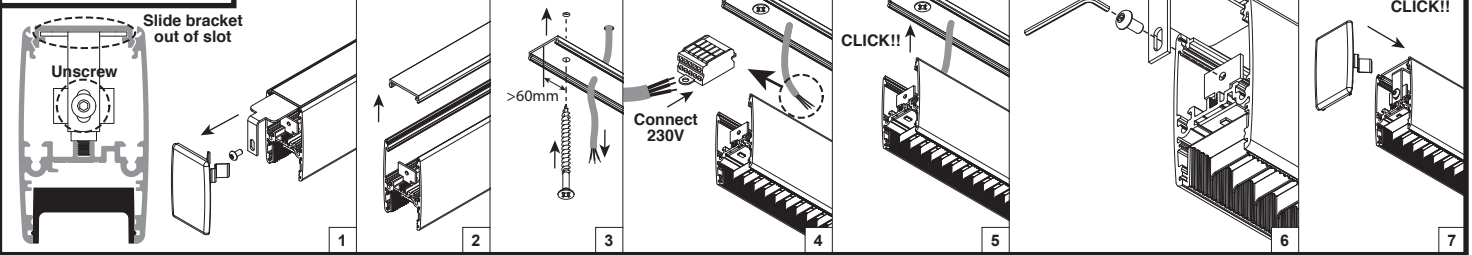


B: Standard Suspension Bracket

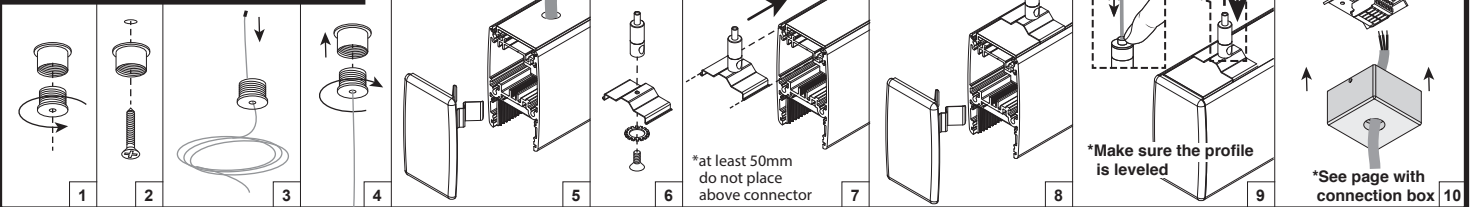


C: Invisible suspension

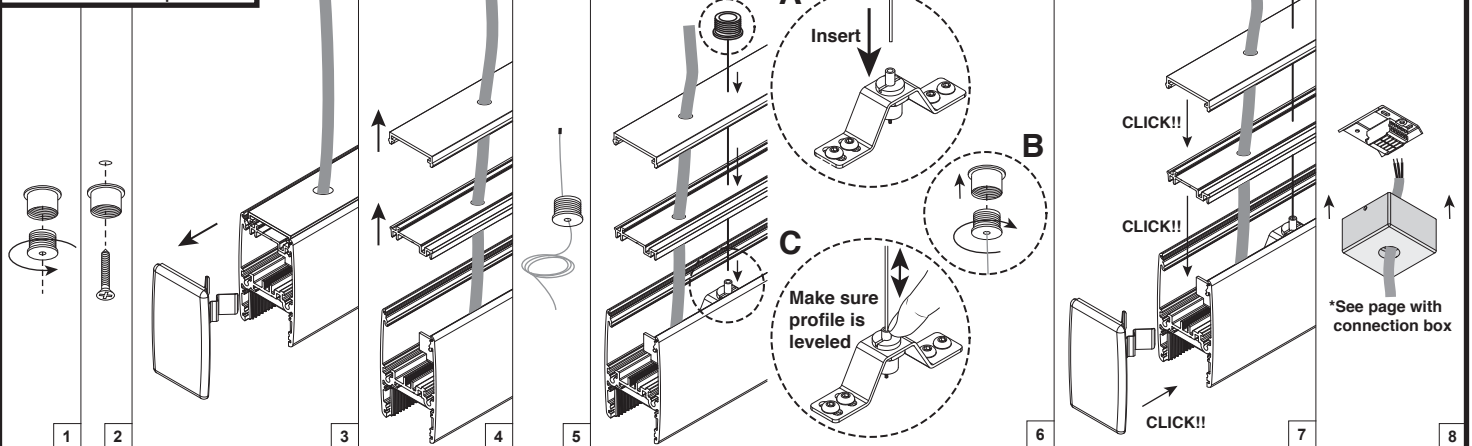



Connectors Suspended

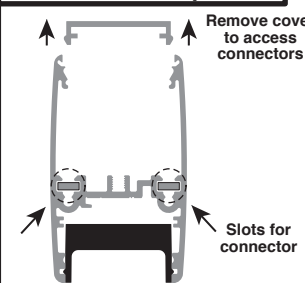



180° Connector Suspended

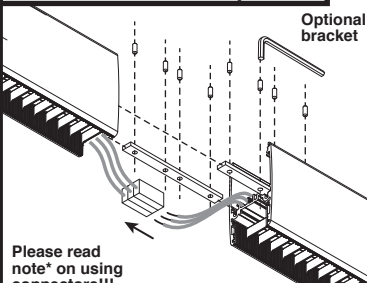


180° Connector Surf. Mounted

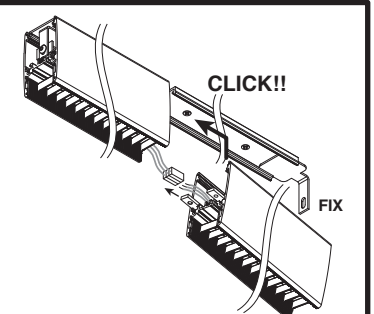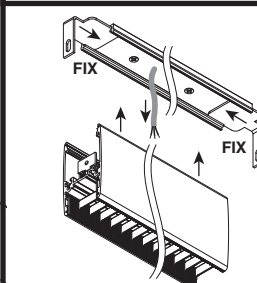


90° Connector Surf. Mounted

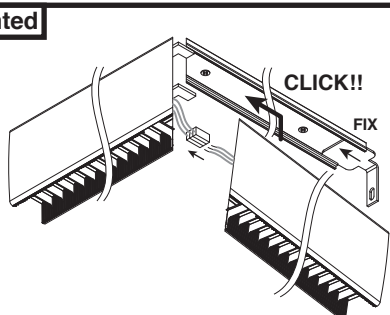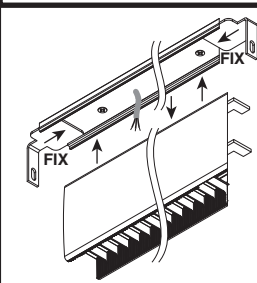

90° Connector Suspended

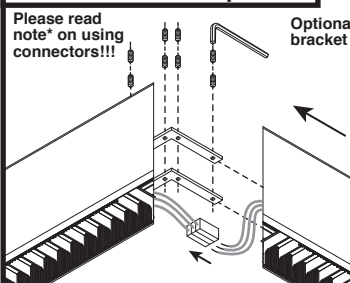

UGR Corner Piece

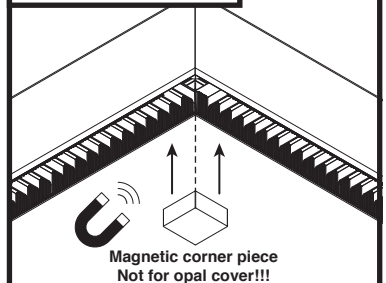

A) Surface Mounted

1. Remove End Cap (Pull)
2. Unscrew and slide out bracket
3. Remove ceiling mounting profile
4. Pull wiring through ceiling mounting profile
5. Fix ceiling mounting profile to ceiling
6. Connect wiring to terminal on the inside of the main profile
7. Snap main profile back onto the ceiling profile
8. Slide bracket into ceiling profile
9. Fix bracket with screw
10. Place end cap back

B) Standard Suspension Bracket

1. Disassemble ceiling fixation
2. Fix ceiling fixation to ceiling using screws
3. Pull steel wire through bottom part of ceiling fixation
4. Reassemble ceiling fixation
5. Remove end caps
6. Assemble suspension bracket
7. Place suspension bracket into profile
8. (Bracket cannot be placed above connectors)
9. Place end caps back
10. Insert suspension wire into wire gripper
11. Adjust height and make sure profile is leveled
12. Make power connection (see page connection boxes)

C) Invisible Suspension

1. Disassemble ceiling fixation
2. Fix ceiling fixation to ceiling using screws
3. Remove end caps
4. Remove top cover
5. Pull steel suspension wire through bottom part of ceiling fixation
6. Pull steel suspension wire through top cover
7. Pull steel suspension wire through indirect lighting profile (only for up/down)
8. Insert suspension wire into wire gripper (A)
9. Mount profile to ceiling by screwing bottom part of ceiling fixation to top part (B)
10. Adjust height and make sure profile is leveled (C)
11. Snap indirect lighting profile back into outer profile (only for up/down)
12. Make sure cables are not pinched between the 2 profiles
13. Place top cover back
14. Place end cap back
15. Make power connection (see page connection boxes)

Attention!!

Be very careful with LEDs when working on product! Do not touch LEDs. Do not let tools come in contact with LEDs. Warranty void if LED contact has taken place. Only to be installed by a qualified electrician. Always make sure power is completely switched off when working on profile. Always make sure suspension cables are placed perpendicular to both the ceiling and the profile itself. When connecting multiple parts of a structure always make sure LED polarity is respected. This means connecting white to white and grey to grey wires.

90°/180° Connector Suspended

1. Place connector in slots (see marked locations)
2. Make power connection between profiles
3. Fix connector bracket in first profile part
4. Slide profile parts against each other
5. Fix connector bracket in second profile
6. Place magnetic corner piece into corner (only for 90° connector with UGR grid)

90°/180° Connector Ceiling Mounted

1. Place first part of profile against ceiling
2. Fix brackets on ends
3. Fix ceiling part of second profile.
4. Connect wiring.
5. Slide second profile onto brackets.
6. Snap profile on to ceiling part.
7. Fix bracket on profile end.

*NOTE ON USING CONNECTORS (90°/180°)
For prevention of light leakage caused by the small gap on the connection of 2 profiles please place tape over gaps.
See page "Light leakage prevention"

This document subject to change.
Please visit www.doxis.be for the latest updates