
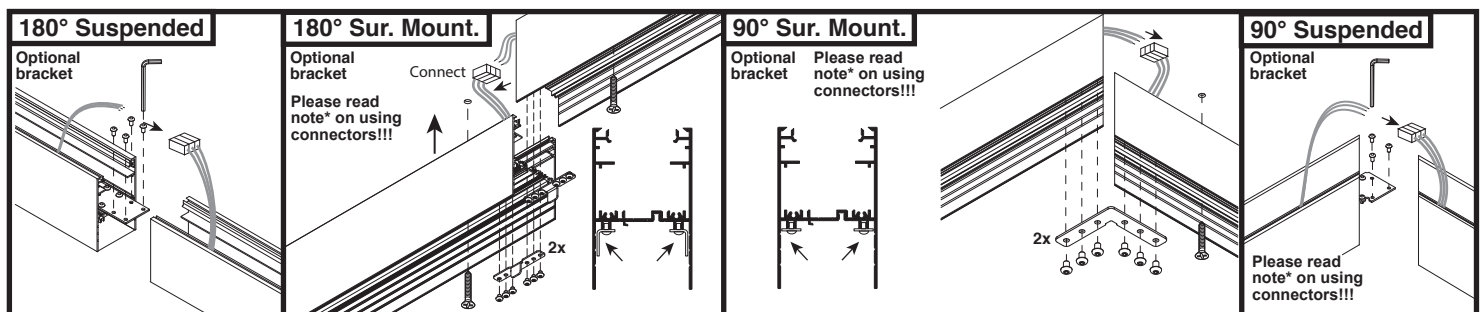
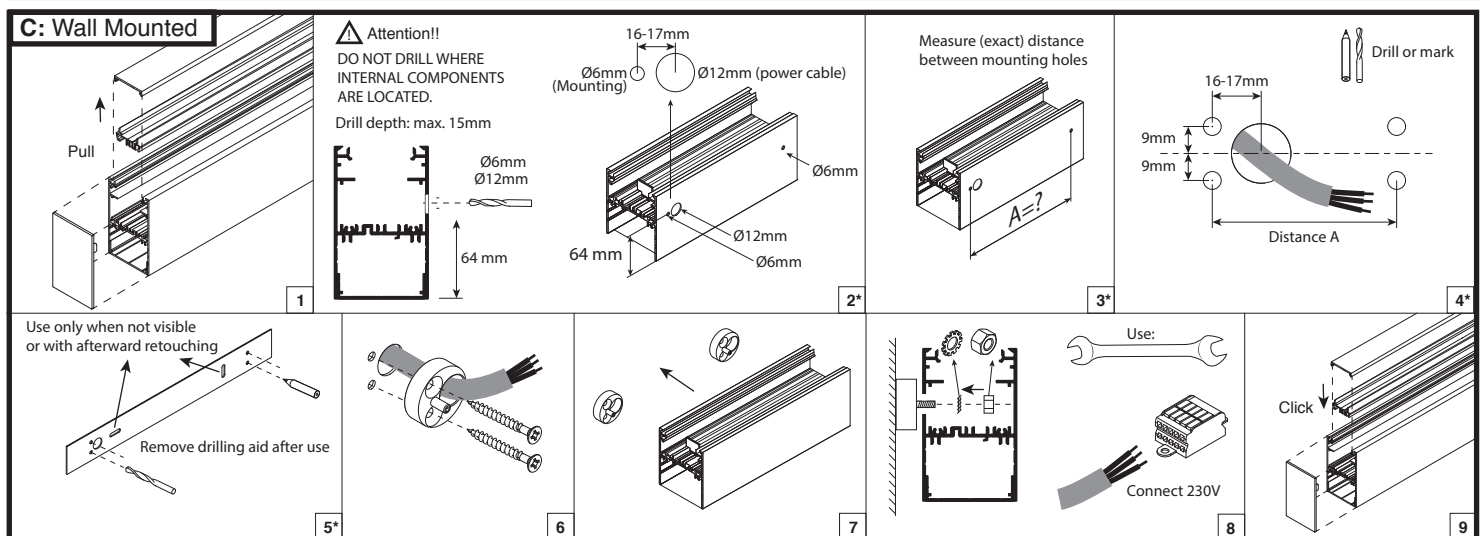
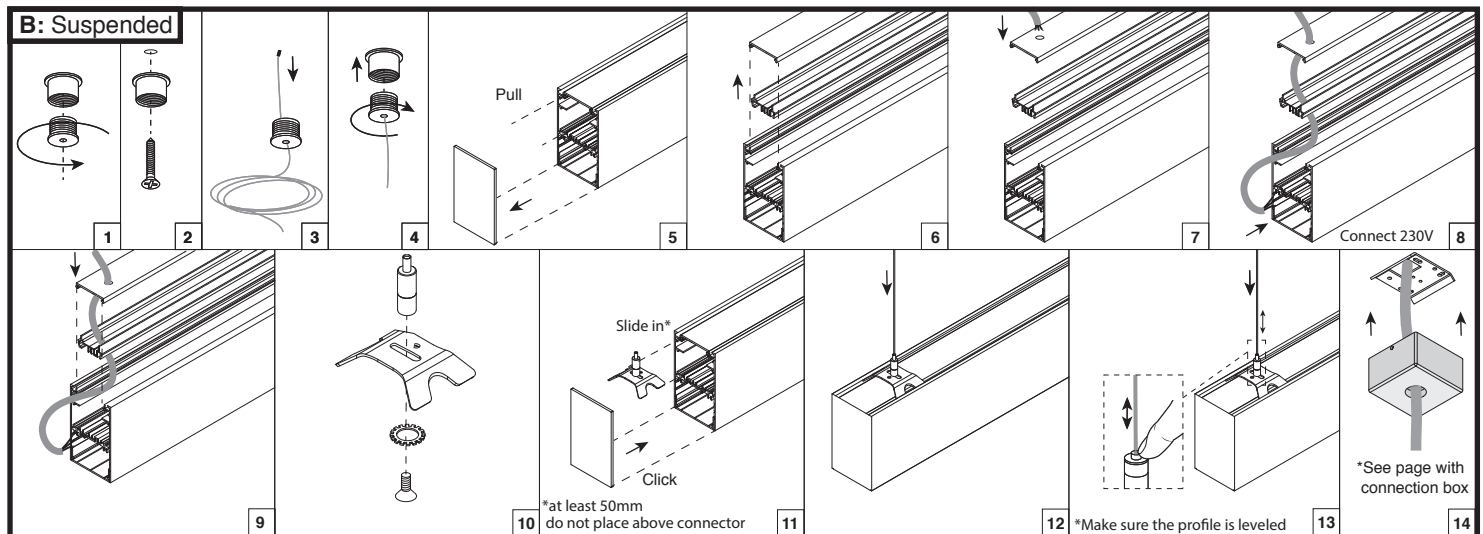


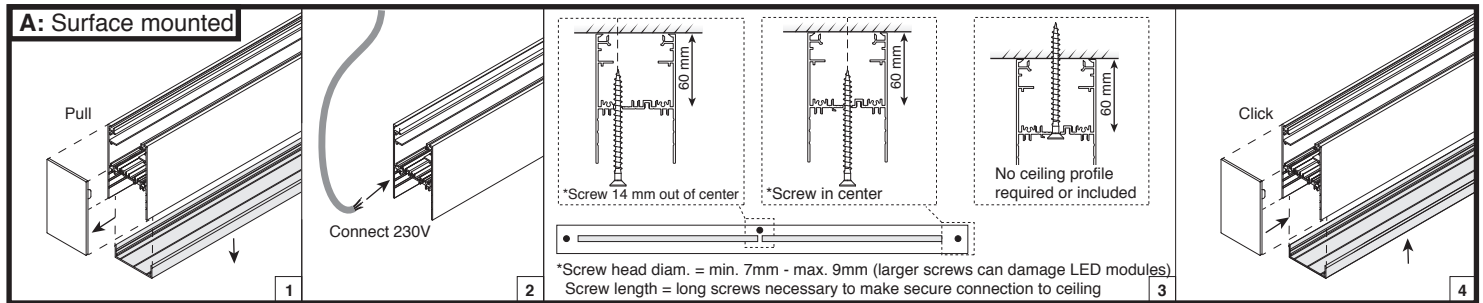

A) Surface Mounted
1. Remove PC cover + end cap + inner profile
2. Connect 230V
3. Fix profile to ceiling using screws
Only use pre-drilled holes
Respect screw dimensions
4. Place PC cover + end cap + inner profile back

90°/180° Connector Suspended
1. Remove top cover
2. Place pieces against each other
3. Connect power
4. Place connector bracket using screws
5. Place top cover back

90°/180° Connector Surface mounted
1. Remove covers
2. Connect power
3. Mount pieces against each other
4. Place connectors
5. Fix connectors (2x) using screws
6. Place covers back

***NOTE ON USING CONNECTORS!**
ATTENTION When using 90°/180° connectors
For prevention of light leakage caused by the small gap on the connection of 2 profiles please place tape over gaps.
See page "Light leakage prevention"

B) Suspended
1. Disassemble ceiling fixation
2. Fix ceiling fixation to ceiling using screws
3. Pull steel wire trough bottom part of ceiling fixation
4. Reassemble ceiling fixation
5. Remove end cap
6. Remove top cover + inner profile
7. Pull cable trough top cover
8. Connect power cable
9. Place cover + inner profile back
10. Fix wiregripper onto suspension bracket
11. Place end cap back / Slide suspension brackets into profile
Move bracket to desired location (>50mm from edge)
Fix bracket with set screw
(Bracket cannot be placed above connectors)
12. Put wire into wire locks
13. Adjust height and cut of excess wire
14. Place housing over bracket and reassemble
See page with mounting brackets

C) Wall Mounted
1. Remove end cap and top cover
*When drilling aid is not supplied:
2. Drill holes into profile if they are not pre-drilled
3. Measure holes (distance A and B)
4. Drill holes in wall + place plugs or mark screw locations.
Only use countersunk screws, max. screw diameter 5mm

*When drilling aid is supplied:
5. Drill holes in wall + place plugs or mark screw locations using aid.
Only use countersunk screws, max. screw diameter 5mm
Caliper can be fixed into the wall using the 2 positioning slots.
When using positioning slots make sure holes are not visible afterward or can be retouched before placing profile on brackets.

Further steps:
6. Fix wall mounting bracket to wall using screws
Only use countersunk screws, max. screw diameter 5mm
7. Place profile on brackets by placing holes over threaded shaft
8. Fix profile to bracket with toothed lock washer and nut (use wrench).
9. Place cover and end cap back.

Attention!!
Be very careful with LEDs when working on product! Do not touch LEDs
Do not let tools come in contact with LEDs
Warranty void if LED contact has taken place
Only to be installed by a qualified electrician
Always make sure power is completely switched off when working on profile
Always make sure suspension cables are placed perpendicular to both the ceiling and the profile itself
When connecting multiple parts of a structure always make sure LED polarity is respected. This means connecting white to white and grey to grey wires