


Focus Trimless

DOXIS
LIGHTING FACTORY

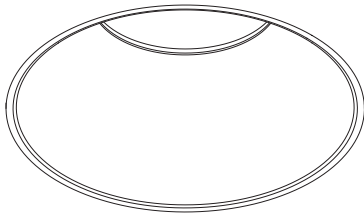

Instructions:

1. Drill a hole in the ceiling
2. Disassemble trimless kit
3. Place housing in ceiling by positioning it sideways
4. Fix housing by screwing screws into ceiling
Adjust housing height using screws on inside
5. Any edge sticking out must be same level as plaster surface
6. Finish ceiling using plaster and paint
7. Connect LED cassette to driver
8. Connect 230V to driver
Insert driver and cassette into ceiling

Forward voltages and nominal drive currents are mentioned on the label supplied with the product or can be found in the technical datasheet of the product.

Always use the correct driver.

Always install the driver according to the wiring schematics supplied with the driver.
Always check if multi-current drivers are set to the correct output current.

Doxis Lighting Factory cannot be held responsible for damage caused by using the wrong driver.



<p>Ø85mm</p> <p>Ceiling thickness: min. 9mm - max. 18mm</p> <p>1</p>	<p>2</p>	<p>3</p>	<p>4</p>
<p>5</p>	<p>2x</p> <p>6</p>	<p>7</p>	<p>Connect LED Red wire: + Black wire: -</p> <p>8</p>
<p>Connect 230V</p> <p>9</p>	<p>Click!!</p> <p>10</p>	<p>If cassette doesn't hold well inside trimless housing, clips can be bent outward a slightly.</p>	

Attention!!

Always follow the instructions described in this document and store this document for future reference.

Do not touch LED surface. Warranty void if LED contact has taken place.
Only to be installed by a qualified electrician.

Always make sure power is completely switched off when working on luminaire.

Doxis Lighting Factory NV cannot be held responsible for any damage caused by incorrect installation, modification, reparation or incorrect application/usage of the product.

Air circulation notice:

Do not topload with insulation materials

